


**avantgarde**  
ACOUSTIC

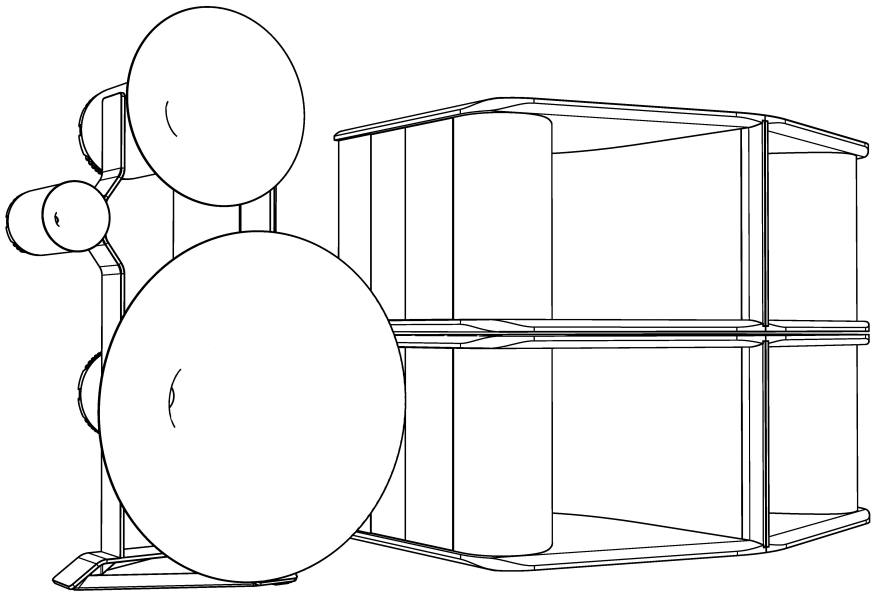

# User Manual


---

TRIO G3 & SPACEHORN

---

Version 1.6

Listen & Love

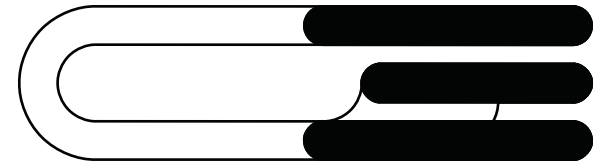

# TABLE OF CONTENTS

## SAFETY INFORMATION

SAFETY INFORMATION	6
PRECAUTIONS ON INSTALLATION	7
OPERATING VOLTAGE	7

## SET UP

CONTENT OF PACKAGES	8
UNPACKING	10
ADJUSTABLE FEET	11
ROOM PLACEMENT SPACEHORN	12

## OPERATION TRIO G3

SAFETY PRECAUTIONS	14
PREPARATION BEFORE CONNECTION	14
CONNECTION PASSIVE VERSION – SINGLE WIRING	16
CONNECTION PASSIVE VERSION – TRI WIRING	17
CONNECTION ITRON VERSION – BALANCED XLR	18
OPERATION ITRON – POWER MODES	19
OPERATION ITRON – AUDIO SOUND ADJUSTMENTS	20
OPERATION ITRON – GAIN ADJUSTMENTS	21

## OPERATION SPACEHORN

SPEAKER LEVEL INPUTS	22
BALANCED INPUTS	23
POWER MODES	24
SPEAKER LEVEL INPUT	25
LED BRIGHTNESS CONTROL	25
DSP VOLUME CONTROL	26
DSP SOFTWARE INSTALLATION	27
DSP USER INTERFACE	28
DSP SETTINGS	29

## FINE TUNING

ROOM PLACEMENT	30
TOE-IN & TOE-OUT	31
LISTENING HEIGHT	32

## MISCELLANEOUS

12V DC TRIGGER	33
E-FUSE	33
FUTURE UPGRADES	33
CLEANING	34
WARRANTY	35



## SAFETY INFORMATION

CAUTION



To prevent fire, shock or damage, do not expose the components to rain or moisture.



Conditions for operation:


room temperature 5 – 35° C,  
humidity 10 – 75%



It is intended to alert the user of the presence of uninsulated “dangerous voltage” within the products enclosure. To avoid electrical shock, do not open the cabinet of the components.



Excessive sound pressure levels might cause serious damage to your health. Do not operate the speaker system at excessive levels for a long period of time.

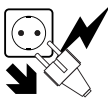

Should any solid object or liquid fall into the cabinet of the components, unplug the unit and have it checked by qualified personnel before operating it any further.



Unplug the components of your system from the wall outlet and antenna if they are not to be used for an extended period of time. To disconnect the power cord, pull it out by the plug. Do not pull the cord itself. Never touch the plugs with wet hands.




Only let qualified personnel repair or reassemble the components of the system.

These loudspeakers are designed for the playback of audio signals **PRIVATE USE ONLY** for “Home & Office use” only. Any other use, especially in commercial applications, is expressly prohibited.



## SAFETY INFORMATION

PRECAUTIONS ON INSTALLATION

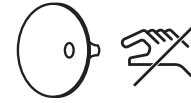

Do not move or carry the speakers by holding the horn assembly.




Place the components of the system on a flat solid surface.



To prevent internal heat build-up in the components, place units in a location with sufficient air circulation. Do not install the speakers in a location near heat sources such as radiators, or in a place subject to direct sunlight, excessive dust, or mechanical vibration.



Connect everything securely. Always insert the plugs fully into the jacks. A loose connection may cause hum pick-up and can damage the system. Use only high-quality cables with self-tightening banana speaker and RCA or XLR plugs.

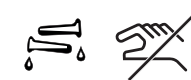

To avoid damaging the finish, never use alcohol, paint thinner or chemicals to clean the components.



Read this operators manual thoroughly before operating the speaker system.


### OPERATING VOLTAGE





The electronic components & amplifiers are suitable for operating voltages ranging from 90 – 250 Volt at 50 or 60 Hz.


## CONTENT OF PACKAGES

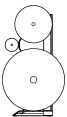TRIO G3

2 x  2 x wooden crates with the 2 x speakers.


6 x  6 x protective discs (with a center pit) for the Trio G3 spikes to protect sensitive floors from damage.


2 x  2 x power chords (3m)\* *(Trio Itron version only)*


1 x  1 x user manual (covering Trio G3 & SpaceHorn)


## CONTENT OF PACKAGES

 
SPACEHORN G3


2 x  
4 x  
6 x  2, 4 or 6 x wooden crates\* with the SpaceHorns.

 2 x  
4 x  
6 x  2, 4 or 6 x power chords (3m)\*

2 x  
4 x  
6 x  2 x 5m jumper cable\* between Trio G3 and SpaceHorns no. 1 & 2  
2 x 1m jumper cable\* to connect SpaceHorns no. 1 & 2 with no. 3 & 4  
2 x 1m jumper cable\* to connect SpaceHorns no. 3 & 4 with no. 5 & 6  
*(Trio G3 passive version with SpaceHorns only)*

2 x  
4 x  
6 x  2 x 5m XLR cable\* between Trio G3 and SpaceHorns no. 1 & 2  
2 x 1m XLR cable\* to connect SpaceHorns no. 1 & 2 with no. 3 & 4  
2 x 1m XLR cable\* to connect SpaceHorns no. 3 & 4 with no. 5 & 6  
*(Trio G3 Itron version with SpaceHorns only)*

1 x  1 x height adjustment tool to adjust the leveling feet of the SpaceHorns.

1 x  1 x triangle allen wrench tool to remove the upper metal covers of the SpaceHorns.

*\* the number of SpaceHorns & cables depend on the number of SpaceHorns ordered.*

## UNPACKING

TRIO G3



Please note the very heavy weight of the speaker system when unpacking and installing the system! We strongly advise doing this work only with the help of other persons!



Do not move or carry the speakers by holding the horn assembly. The horns & the phase alignment slider of the tweeter may get damaged.

- 1 Unscrew and remove top cover of the wooden crate. Note, that the screws may be hidden under the red "caution"-tape.
- 2 Unscrew and remove the side panels of the wooden crate.
- 3 Carefully tilt the speaker into its upright position.
- 4 Use wheel board (min. size 70 x 70cm) to transport the speaker to its listening position. Note, that the spherical horns can be removed by unscrewing them counterclockwise. This makes it easier to pass through narrow doorways.


## UNPACKING

SPACEHORN

- 1 Unscrew and remove top cover of the wooden crate. Note, that the screws may be hidden under the red "caution" tape.
- 2 Unscrew and remove the side panels of the wooden crate.
- 3 Carefully tilt the speaker sideways onto the levelling feet of the SpaceHorns.
- 4 Use wheel board (min. size 70 x 70cm) to transport the speaker to its listening position.

## ADJUSTABLE FEET

TRIO G3

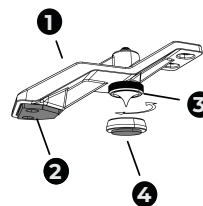

The Trio G3 stands on 3 spike absorber elements **1** with integrated synthetic-felt pads **2** to glide the speaker on the floor when positioning the speaker.

The integrated spikes are in a lifted shipping position not to touch & scratch the ground. Once the speaker is finally positioned, the spikes can be lowered by turning the knurled screw **3** counterclockwise.

If required use the protective discs **4** to protect sensitive floors from damage.

## ADJUSTABLE FEET

SPACEHORN

The SpaceHorn is shipped with the 4 x adjustable gliding feet mounted on the bottom plate of the speaker body for a horizontal placement of the SpaceHorn (see graph 1 to 3, next page).

- 1 If the SpaceHorns are placed vertically (see graph 4 to 7, next page) the gliding feet needs to be relocated. Carefully tilt the SpaceHorn to the narrow backside of the speaker, so that both the 4 x gliding feet and the 4 x metal covers become accessible. Use a soft underlay (eg. blanket) not to scratch the speaker body.



- 2 Use the triangle allen wrench tool to remove the metal covers of the SpaceHorns.
- 3 Now swap the positions of the 4 x gliding feet and the 4 x metal covers.

- 4 Place the SpaceHorns to the final listening position.



- 5 Use the height adjustment tool (stell rod) to adjust the gliding feet of the SpaceHorns.


# ROOM PLACEMENT

## SPACEHORN


The Trio system is available in a variety of subwoofer configurations & combinations thereof:

- 2 x SpaceHorn SingleDrive or TwinDrive
- 4 x SpaceHorn SingleDrive or TwinDrive
- 6 x SpaceHorn SingleDrive or TwinDrive


The positioning of the subwoofers mostly depends on the geometry, existing furniture and the interior design criteria of the room. The graphics show the various options.

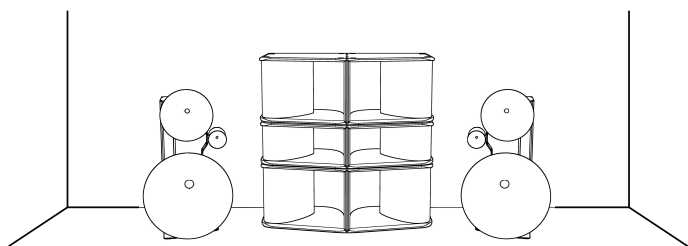


Graph 1

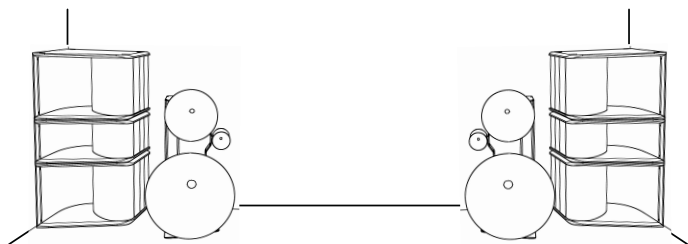


Graph 2

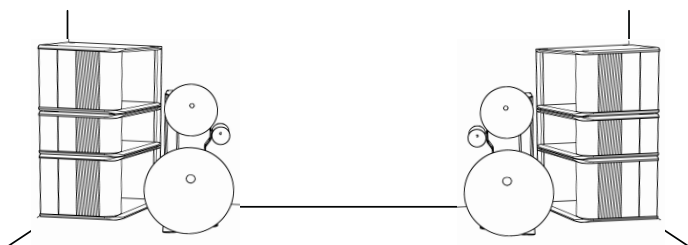


Graph 3

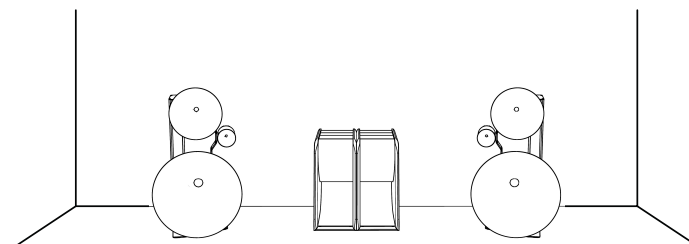


Graph 4

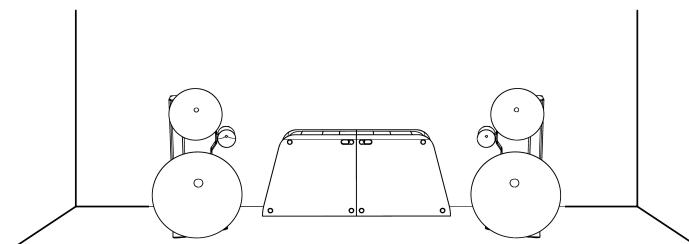

Graph 5

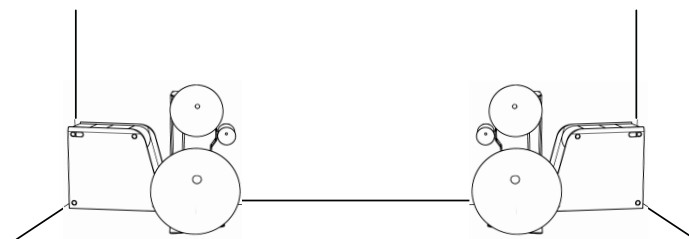

Graph 6

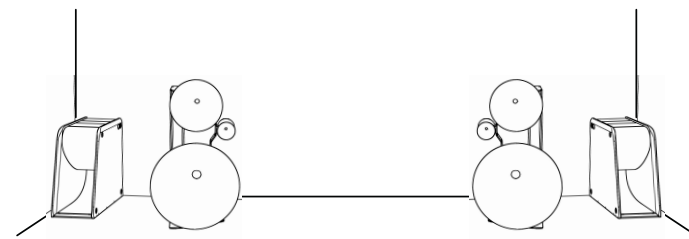

Graph 7



## SAFETY PRECAUTIONS

### ON INSTALLATION



The power to all components must be switched "off" (or disconnected from the household AC) before making any audio connections.



To prevent malfunction/defects, do not operate components with open input/output terminals.



Control the polarity of speaker cables! Never mix up "+" and "-". Wrong polarity will deteriorate the sound quality and can damage amplifier and the active power module of the subwoofer.



Do not short circuit the +/- electric poles of the speaker cables.

Use high quality cable with solid speaker plugs (spades, bananas etc).

## PREPARATION BEFORE CONNECTION

### TRIO G3


- ① Unscrew and remove the Connection Slot Cover ②
- ② Remove the Cable Duct Cover ⑤ which is held by 4 x clip fasteners ④ by gently pushing the cover outwards from behind, using your fingertips through the Cable Duct Opening ⑥

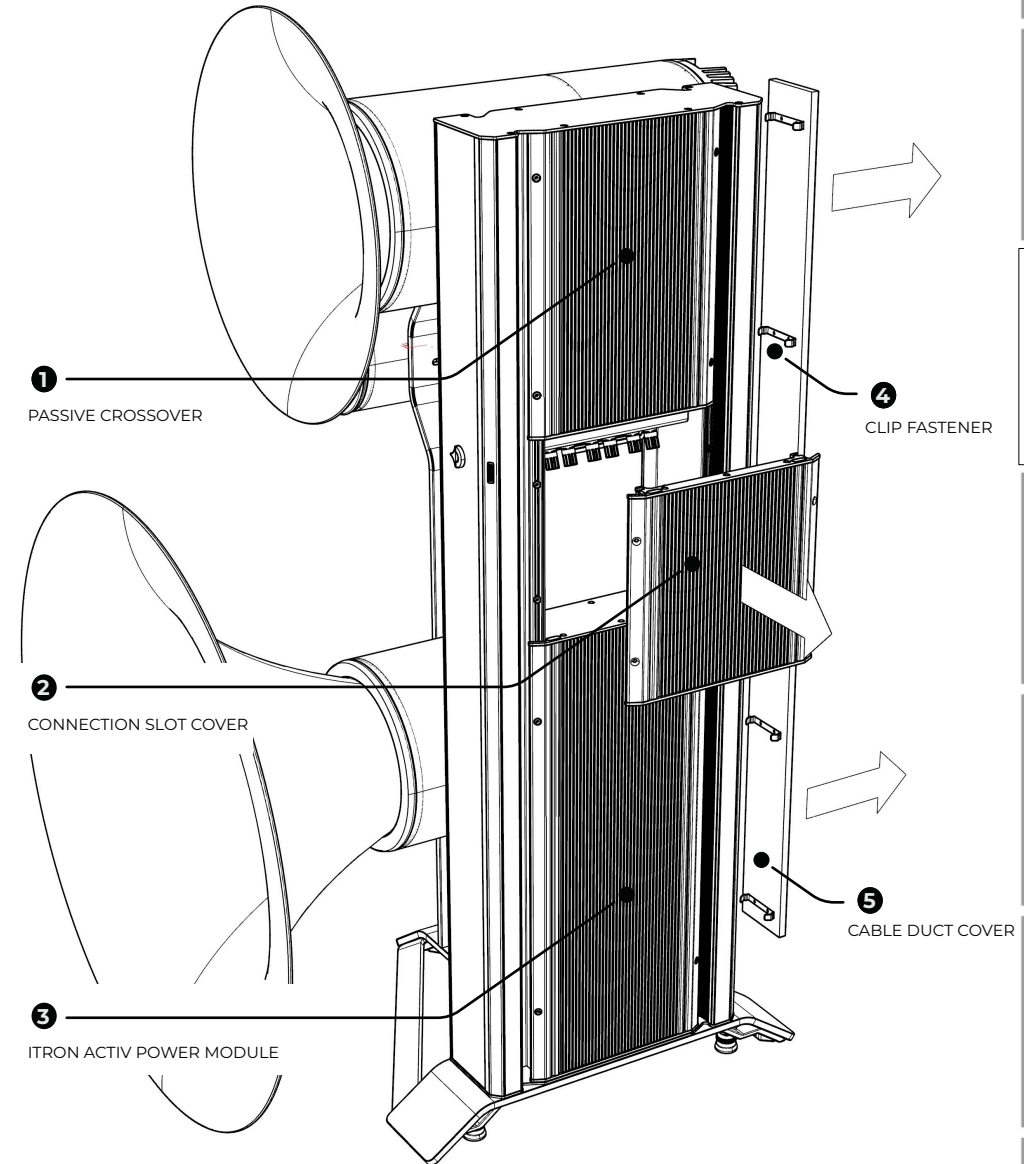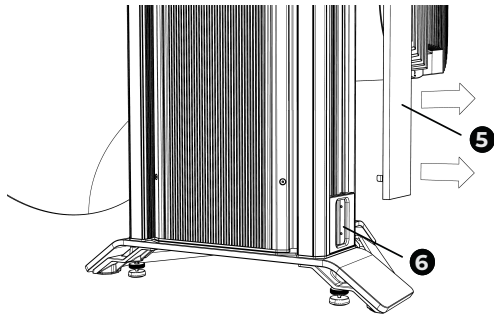



## CONNECTION – TRIO G3 PASSIVE VERSION

SINGLE-WIRING

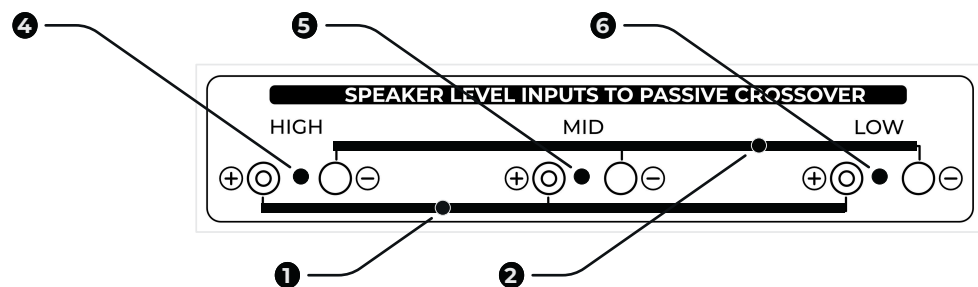

Tweeter **4**, midrange **5** and lowrange **6** drivers have dedicated speaker terminals. In the standard configuration, these terminals are interconnected with 2 x OFC Trident Bridges **1** & **2**. One bridge **1** interconnects all “+” connectors, the other one **2** all “-” connectors.

- 1 Connect the speaker terminal **4** of the TRIO G3 speakers and the speaker-level input terminal of the SPACEHORNS with the long jumper cable. The jumper cable is included in the accessory box.
- 2 If you use more than 1 x subwoofer per channel, connect speaker-level input terminal of the SPACEHORNS No.1 and speaker-level input terminal of the SPACEHORNS No.2 with the shorter jumper cable. The jumper cable is included in the accessory box.


- The jumper cables have hollow banana plugs which are open at the rear. This way it is possible to stack multiple speaker cables to the same speaker terminal.

- 3 Connect the Speaker-Output of your power (or integrated) amplifier with the speaker MID terminal **5** of the TRIO G3 speakers.
- 4 Only now, connect the AC power cords of the components to a household AC outlet and turn on the subwoofer and the other equipment.

- The cable at the INTERNAL CONNECT PORT is a non-serviceable internal connection! Do not unplug.

## CONNECTION – TRIO G3 PASSIVE VERSION

TRI-WIRING

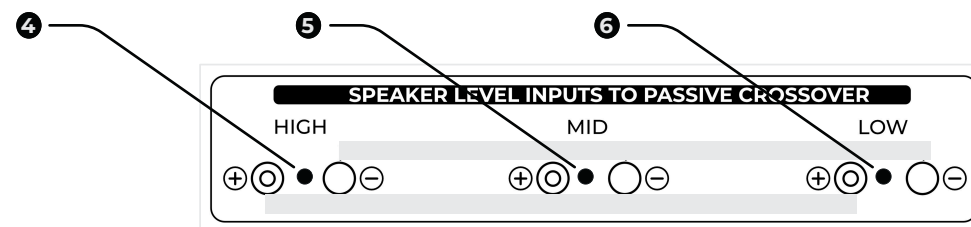


To operate the system in TRI-Wiring or TRI-Amping mode, the 2 x OFC Trident Bridges **1** & **2** need to be removed.

- 1 Open the screw caps of Tweeter **4**, midrange **5** and lowrange **6** speaker terminals and remove the two OFC Trident Bridges **1** & **2**.
- 2 Connect the Speaker-Output of your power (or integrated) amplifier with the speaker terminals **4** **5** **6** of the TRIO G3 speakers using a dedicated cable for each connection. The same applies when using multiple amplifiers for treble, midrange and bass.

# CONNECTION – TRIO G3 ITRON VERSION

## BALANCED XLR CONNECTION

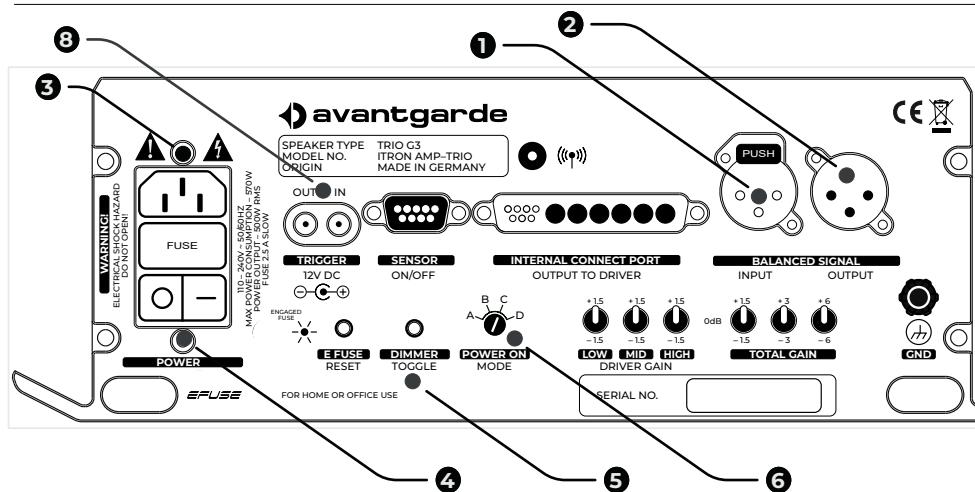

Line level connections feature balanced XLR connectors/terminals. The pin assignment of these follows the EIA RS-297-A standard: PIN 1 = GND, PIN 2 = HOT, PIN 3 = COLD. Never use cables with differing pin assignment! This will deteriorate the sound quality and can damage the amplifiers and/or the active power modules of the subwoofers.


- ① Connect the line level output of your preamplifier with the balanced line level input **1** of the TRIO G3 speaker with an XLR cable.
- ② Connect the balanced XLR daisy chain output **2** of the TRIO G3 speaker and the balanced XLR input of the SPACEHORNS with the long XLR jumper cable. The jumper cable is included in the accessory box.
- ③ If you use more than 1 x subwoofer per channel, connect the balanced XLR daisy chain output of the SPACEHORNS No.1 and the balanced XLR line level input of the SPACEHORNS No.2 with the shorter XLR jumper cable. The jumper cable is included in the accessory box.
- ④ Only now, connect the AC power **3** of the components to a household AC outlet and turn on the ITRON module and the subwoofer.

# OPERATION – TRIO G3 ITRON VERSION


## POWER MODES

- ① The mains power switch **4** has an “O” OFF-position & an “I” ON-position. For operation switch to the ON position.
- ② The TRIO G3 features an illuminated sensor switch **7** on its front side to turn the speaker ON.

ORANGE light = STANDBY  
 WHITE light = ON  
 PURPLE light = OTA firmware update (*optional future upgrade only*)

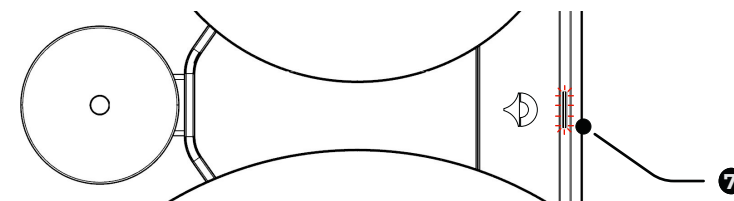

The brightness of the light can be adjusted with the DIMMER TOGGLE button **5**, toggling through 8 x intensities.

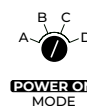

- ③ 4 x different power ON/OFF modes can be selected with the POWER ON mode selector **6**. Use a screwdriver to switch the modes.

➤ newly selected modes will only become active after the mains power switch **4** has been shortly switched OFF & ON again.

**MODE A** speaker is ON upon powering it up with the mains power switch **4**. To be used for remote controlled AC power sockets. The frontal sensor switch **7** may still be used to switch into standby mode, but upon next power cycle the speaker will turn ON again directly.



**MODE B** speaker is ON when a 12VDC trigger voltage is detected at the remote-trigger socket **8**. The speaker will automatically switch OFF, when the 12V trigger voltage is switched OFF.

**MODE C** the frontal sensor switch **7** is used to toggle between speaker ON & STANDBY.

**MODE D** speaker is switched ON & STANDBY by remote control signal (*optional future upgrade only*).

# OPERATION – TRIO G3 ITRON VERSION

## AUDIO SOUND ADJUSTMENTS

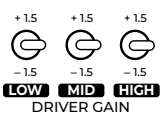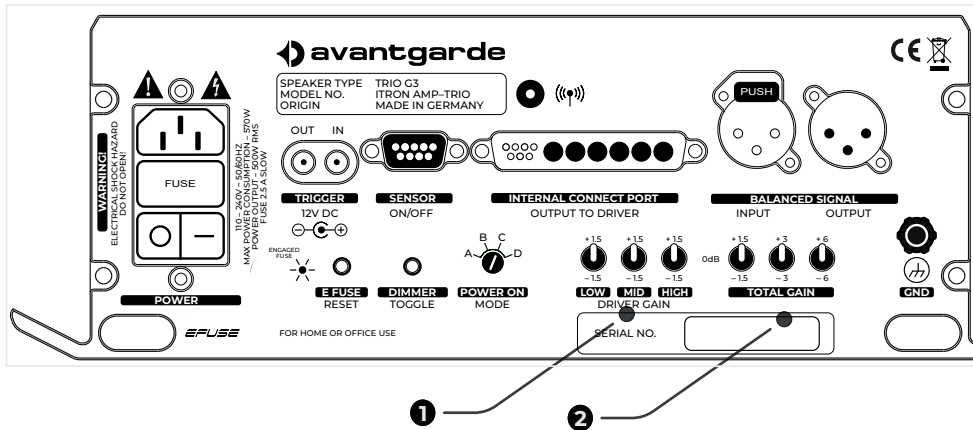


The 3 x DRIVER GAIN switches ① allow tonality adjustments of the 3 x horns in -1.5 dB, 0 dB (= FLAT) and +1.5 dB steps.

- LOW** adjusts the level of the lowrange horn (100–600 Hz)
- MID** adjusts the level of the midrange horn (600–4.000 Hz)
- HIGH** adjusts the level of the tweeter horn (above 4.000 Hz)

Factory default is the “0 dB” position for all 3 switches.

Adjustments may be made according to personal taste, for adapting to the tonal “brightness” (or lack thereof) of connected source equipment, or to mildly correct room acoustic influence.


In practice, the tonal balance between the 3 x frequency bands can be altered up by up to 3 dB. For example:

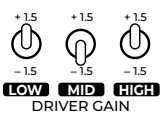

With the HIGH and LOW switches set to +1.5 dB, and the MID switch set to -1.5 dB, the relative volume of the midrange is reduced by 3 dB against the tweeter and lowrange horns. This could be used as a favorable voicing for “shouty” recordings (with over-emphasized midrange frequency content) or in an acoustical environment that has a “peak” in the midrange.

# OPERATION – TRIO G3 ITRON VERSION


## GAIN ADJUSTMENTS

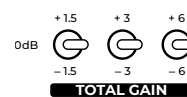


The 3 x TOTAL GAIN switches ② allow the adjustment of the gain of the speakers to the strength of the line level signal from the connected preamp. To avoid sound degrading potentiometers in the signal path, 3 x switches in an additive stepped arrangement are being used. Factory default is the “0 dB” position for all 3 switches.

Practical example: If a preamp already makes big “jumps” in sound level by turning the volume knob just slightly, reducing the iTRON’s input gain by up to -10.5 dB may increase the adjustment angle of the pre amps volume knob considerably, thus enhancing its practical usefulness for fine volume adjustments.


The following steps are possible:

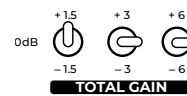


+/- 1.5 dB = left switch in “+” or “-” position

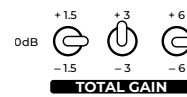


+/- 3 dB = central switch in “+” or “-” position

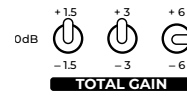


+/- 4.5 dB = central & left in “+” or “-” position

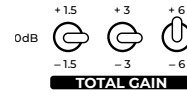


+/- 6 dB = right switch in “+” or “-” position

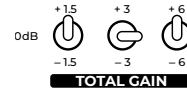

+/- 7.5 dB = right & left in “+” or “-” position

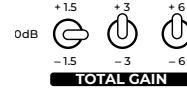


+/- 9 dB = right & central in “+” or “-” position

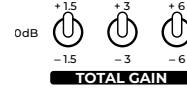

+/- 10.5 dB = all 3 switches in “+” or “-” position

## CONNECTION - SPACEHORN

### SPEAKER LEVEL INPUT

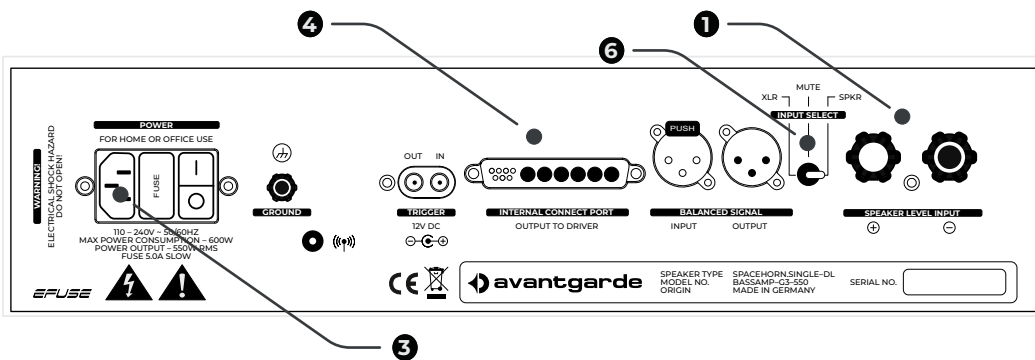

① Connect the speaker terminal of the TRIO G3 speakers and the speaker-level input terminal of the SPACEHORNS ① with the long jumper cable. The jumper cable is included in the accessory box. Switch Input Select ⑥ to SPKR input.

② If you use more than 1 x subwoofer per channel, connect speaker-level input terminal ① of the SPACEHORNS No.1 and speaker-level input terminal of the SPACEHORNS No.2 with the shorter jumper cable. The jumper cable is included in the accessory box.


➤ The jumper cables have hollow banana plugs which are open at the rear. This way it is possible to stack multiple speaker cables to the same speaker terminal.

③ Only now, connect the AC power cords ③ of the components to a household AC outlet and turn on the subwoofer and the other equipment.

④ ➤ The cable at the INTERNAL CONNECT PORT ④ is a non-serviceable internal connection! Do not unplug.

## CONNECTION - SPACEHORN

### BALANCED INPUT

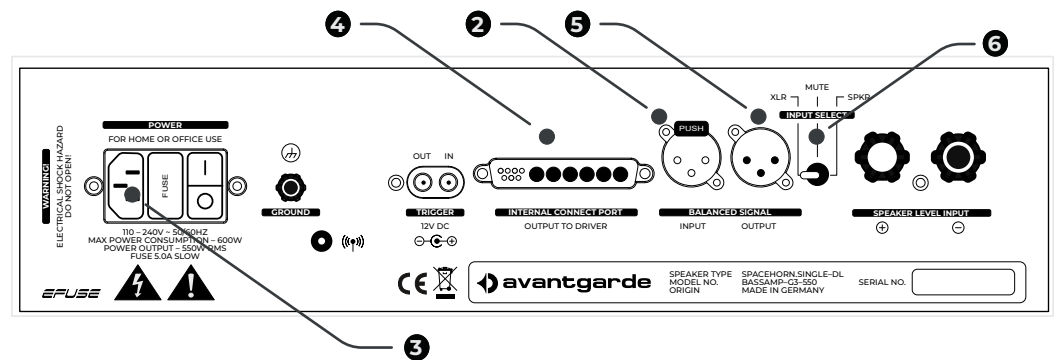

Line level connections feature balanced XLR connectors/terminals. The pin assignment of these follows the EIA RS-297-A standard: PIN 1 = GND, PIN 2 = HOT, PIN 3 = COLD. Never use cables with differing pin assignment! This will deteriorate the sound quality and can damage the amplifiers and/or the active power modules of the subwoofers.

① Connect the line level output of your preamplifier or ITRON module with the balanced line level input ② of the SPACEHORNS with an XLR cable. Switch Input Select ⑥ to XLR input.


② If you use more than 1 x subwoofer per channel, connect the balanced XLR daisy chain output ⑤ of the SPACEHORNS No.1 and the balanced XLR line level input ② of the SPACEHORNS No.2 with the shorter XLR jumper cable. The jumper cable is included in the accessory box.

③ Only now, connect the AC power cords ③ of the components to a household AC outlet and turn on the subwoofer and the other equipment.

④ ➤ The cable at the INTERNAL CONNECT PORT ④ is a non-serviceable internal connection! Do not unplug.

# OPERATION - SPACEHORN

## POWER MODES

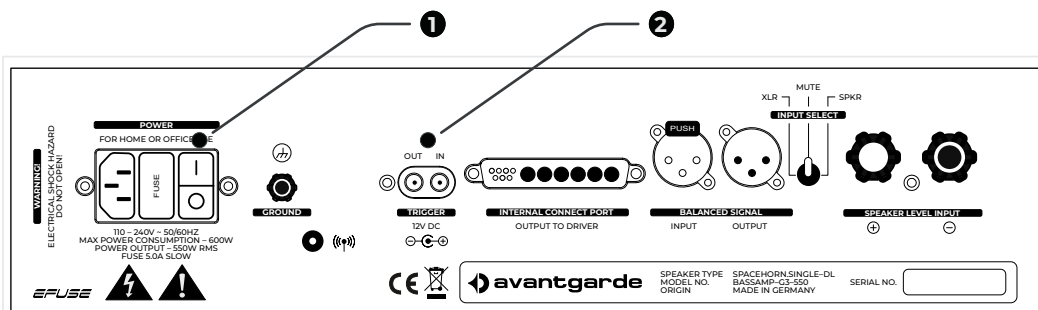

① The mains power switch ① has an “O” OFF-position & an “I” ON-position. For operation switch to the ON position. If the SPACEHORN is not being used for a longer time, switch the system to the “O” OFF-position.



② 4 x different power ON/OFF modes can be selected with the POWER ON mode selector ⑥ which is located on the outer side of the amplifier heatsink. Use a screwdriver to switch the modes.

➤ newly selected modes will only become active after the mains power switch ① has been switched OFF & ON again.

**MODE A** speaker is ON upon powering it up with the mains power switch ①. To be used for remote controlled AC power sockets.


**MODE B** speaker is ON when a 12VDC trigger voltage is detected at the remote-trigger socket ②. The speaker will automatically switch OFF, when the 12V trigger voltage is switched OFF.

**MODE C** the sensor switch ⑦ which is located on the outer side of amplifier heatsink is used to toggle between speaker ON & STANDBY. To be used for remote controlled AC power sockets.


**MODE D** speaker is switched ON & STANDBY by remote control signal (optional future upgrade only).

# OPERATION - SPACEHORN

## SPEAKER LEVEL INPUT

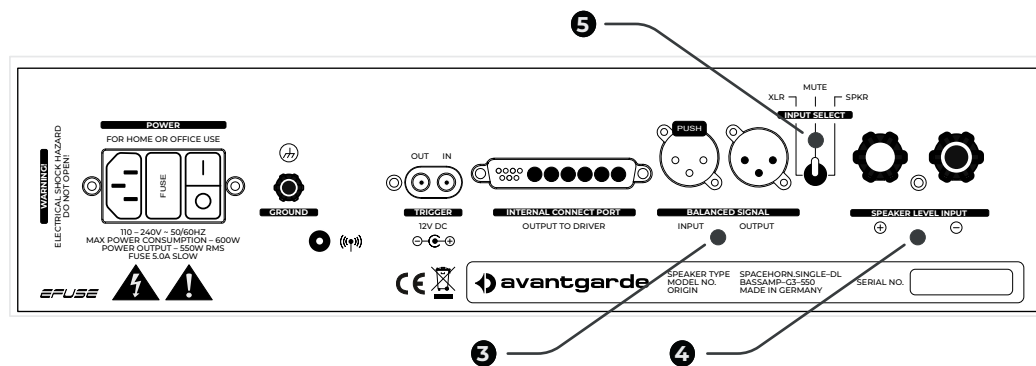

① Speaker Level & balanced inputs ④ & ③ can be connected in parallel. With the Input-Select switch ⑤ the respective input can be selected.

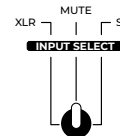


② The Input-Select switch ⑤ also has a MUTE-position, which mutes the inputs. This can be helpful during troubleshooting (e.g. when hum occurs).

# OPERATION - SPACEHORN


## LED BRIGHTNESS CONTROL

The brightness of the LED light can be adjusted with the DIMMER TOGGLE button ⑦, toggling through 8 x intensities.

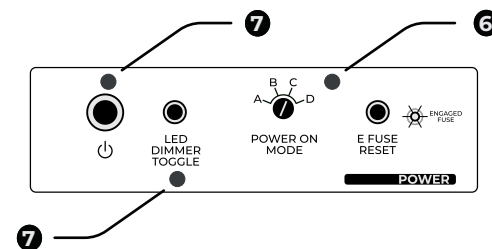

## OPERATION - SPACEHORN

### DSP VOLUME CONTROL

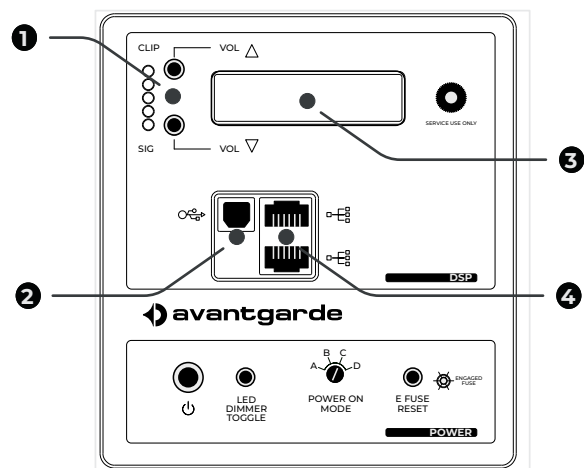


The bass response of the speaker will be influenced by the room and the position of the speaker. This might cause the bass response of the speaker to be strengthened or weakened. Thus as the first step, the overall bass volume needs to be aligned to compensate these effects.

- ① Press the VOL ▲-button ① to increase or the VOL ▼-button ① to reduce the volume of the bass response. The set volume is indicated in the display ③.

## OPERATION - SPACEHORN

### DSP SOFTWARE INSTALLATION

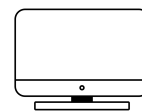

Additional settings can be programmed with the Avantgarde Control software.

The software can be requested by email at our service desk: [info@avantgarde-acoustic.de](mailto:info@avantgarde-acoustic.de)

### LAN CONNECTION TO PC

- ① Each SPACEHORN amplifier features 2 x LAN sockets which allow to daisy chain multiple subwoofers.
- ② Connect the LAN ports ④ of all SPACEHORNS with each other using LAN-cable (type CAT5/6/7/8).

Connect a free LAN port ④ of one SPACEHORN with the LAN port of your computer or with the LAN port of your WIFI router. The Avantgarde Control software installed on your computer/laptop will automatically detect and display all available subwoofer amps.

### USB CONNECTION TO PC

- ① USB port ② for service use only.


### IMPORTANT!



The LAN and the USB connectors are not suitable for the connection of music sources!

# OPERATION - SPACEHORN


DSP USER INTERFACE

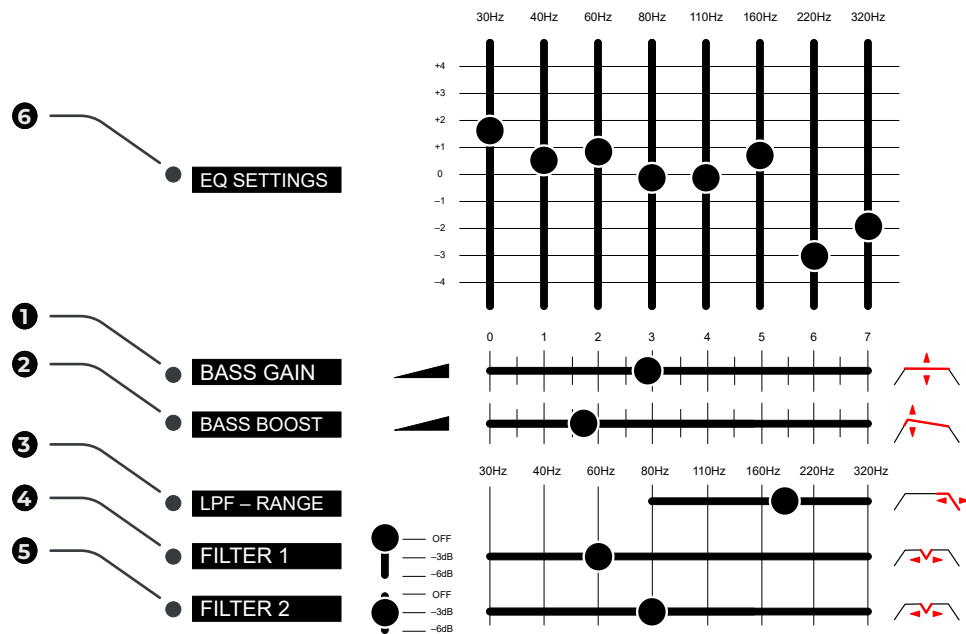

Please note that all changes in the Avantgarde control software immediately become audible in the speaker. This way it is easy to verify the changes by listening and fine adjust if required.

# OPERATION - SPACEHORN

DSP SETTINGS

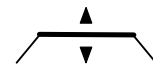


The BASS GAIN slider ① sets the overall volume of the subwoofer.



The BASS BOOST slider ② increases the low frequency response below 45 Hz. This allows to tailor the bass response from “linear” to “fat”.



For individual frequency settings use the 8 x band equalizer ⑥. Each of the 8 x bands can be increased or decreased by up to 4dB. This can be used to tailor your bass response to specific sounds (linear, techno, disco, pop, etc.) or to reduce some wide-band room resonances.

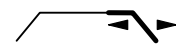

The LPF-RANGE slider ③ sets the upper crossover frequency of the subwoofer. The crossover frequency in its factory setting is linear. The frequency response of the subwoofer seamlessly crosses over to the frequency response of the midrange horn. Both response curves do not overlap and there is no gap inbetween. The crossover point can be used to adjust the “tonal balance” of the system.

- ① When set to a higher frequency, the subwoofer will partly overlap with the midrange horn response. This will add “warmth” and give a richer “body” to the sound character of certain voices and instruments.
- ② If the crossover frequency is purposely set to a lower frequency, subwoofer and midrange frequency response will have a small gap. The tonal balance of the system will shift to a more horn typical “dynamic” and “punchy” sound.



FILTER1 & 2 ④ ⑤ are narrow band “notch” filters with a negative gain of -3dB or -6dB. These filters can be used to eliminate/reduce unwanted narrow band resonance frequencies of the room.

- ① Use commonly available frequency sweep apps to detect the position (Hz) of possibly occurring room resonances. Or play bass heavy music through your system and slowly slide the FILTER set at -6dB upwards until the “boominess” improves.

## FINE TUNING


### ROOM PLACEMENT

We recommend to place both speakers with the tweeter facing to the inside.

Due to the controlled dispersion characteristics of the horns the speaker will excite less unwanted reflections from the room walls compared to conventional speakers. Thus they can be positioned closely to back walls or corners (both or only one speaker in the corner!).

Choose a position for the speakers (tweeter facing to the inside) in your listening room. Both speakers and your listening seat should form an approx. equilateral triangle. Ideally each side of the triangle should be approx. 3,0 – 4,0m.

The speakers should be toed-in with the midrange horns pointing directly to the listening position.

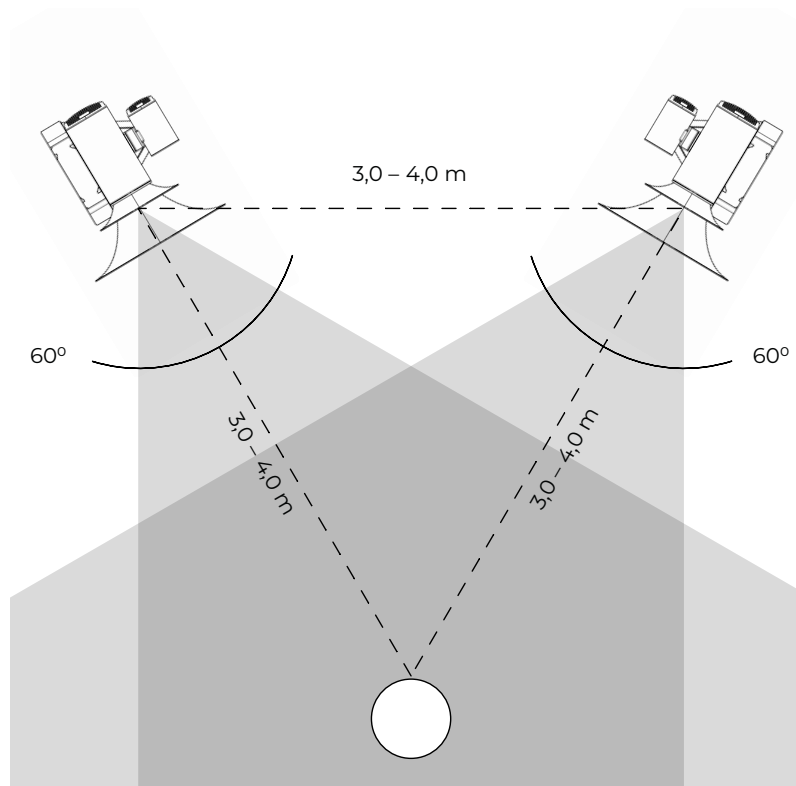

## FINE TUNING

### TOE-IN & TOE OUT


By facing the speakers inwards (toeing-in) or outwards (toeing-out) you can further affect the focus and tonal balance of the system.

By toeing-out, the sound appears to be less “direct” or “forward sounding”, but this may affect the focus of the centre image.

Toeing-in emphasizes increased focus on the centre image, but may affect the width of the stereo image.

As the tweeter is located outside of the centre axis of the speaker, toeing-in will increase its distance to the listener in relation to the acoustical centre of the low & midrange horn. Toeing-out will decrease its distance.

In order to compensate for this acoustical runtime differences the tweeter can be moved forward when toeing-in and moved backwards when toeing-out. The correct offset of the tweeter is always 48,5 cm.

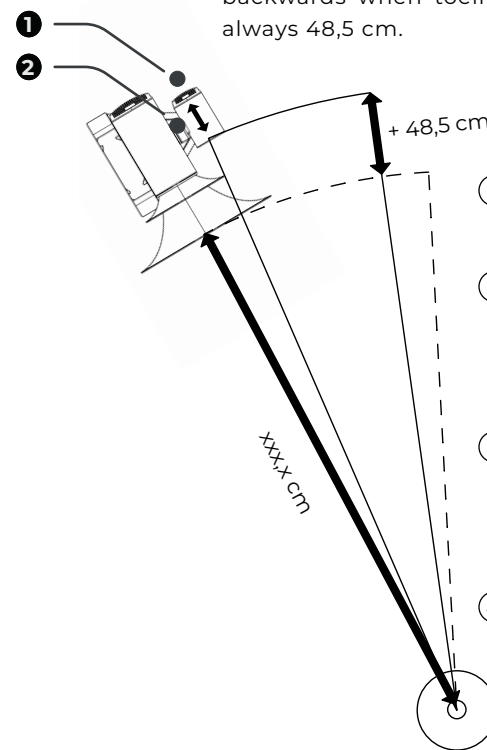


- 1 Choose your favorite toe-in or toe-out position.
- 2 Take a cord and measure the distance (xxx, x cm) from your listening position to the centre top rim of the big lowrange horn.
- 3 Take this length (xxx, x cm) and add 48,5 cm. This is the correct distance from your listening position to the centre top rim of the tweeter horn.
- 4 Loosen the knurled knob 2 to release the tweeter and move the tweeter 1 forward or backward respectively.



## FINE TUNING

### LISTENING HEIGHT

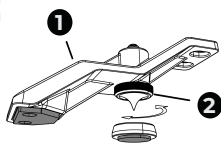

Depending on the listening distance and the height of your seat it might be important to raise or lower the speaker systems. Ideally your ears are in level with the height of the centre of the tweeter (approx. 110 cm above ground).

If not, slightly incline the speaker forward or backward by turning the knurled screw **2** of the spike assembly **1** until the tweeter is pointing at you.

### RUN-IN TIME

Brand new horns and subwoofers usually need at least 40 hours of running-in. During this period sound quality will improve continuously. Please leave the subwoofers ON during this run-in period.


After this run-in, the sound might have been altered and it might be necessary to slightly re-tune the system set-up (positioning and subwoofer-settings).

### WARM-UP TIME FOR ITRON

The ITRON electronics uses pure CLASS-A circuits with Zero-Feedback. To reach its full sonic potential the components need to be fully warmed-up. A sufficient warm up time (> 15 minutes) prior to serious listening is recommended.

## MISCELLANEOUS

### 12V DC TRIGGER

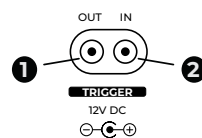


The 12V DC TRIGGER sockets of the ITRON & SPACEHORN electronics features an "IN"-socket **1** and an "OUT"-socket **2**. This way it is easily possible to remotely switch ON/OFF additional devices (additional SPACEHORNS etc.) by simply daisy-chain the 12V trigger signal.

• Wiring can be made with mono or stereo jack cables.


### E-FUSE



All Avantgarde electronics are equipped with a state-of-the-art electronic protection circuit. This E-FUSE continuously monitors the unit and in the event of a fault immediately interrupts the flow of current with unrivaled precision & speed and thus protects the device from damage.

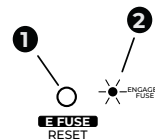

When the E-FUSE has tripped, the current flow will be interrupted and the device stops operating. The red engaged fuse LED **2** will illuminate. Press the E-FUSE RESET button **1** to reset. If the E-FUSE keeps tripping, a permanent malfunction has occurred. Disconnect the device from the mains and get it serviced by your dealer.

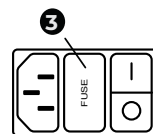

All Avantgarde electronics are equipped with a mains ON-OFF power switch that includes an external fuse holder **3**. In order to avoid any kind of sound degradation, the usual glass-fuse is replaced as standard in all Avantgarde E-FUSE controlled devices by a massive copper bolt to bridge the power.

For whatever reason this copper bolt may at any time be replaced by a conventional 2.5 amp slow blow glass fuse.

### FUTURE UPGRADES *(optional future upgrade only).*



Your system has already been equipped with a wifi antenna port to support future upgrades. This includes remote control signals (from apps etc.) and receiving OTA (over the air) update files for the firmware of the built-in controller chipset.

## CLEANING

### CLEANING OF HIGH GLOSS LACQUER SURFACES



We recommend to regularly clean high gloss color-coated surfaces (for ex. horns) with a dry soft fabric (duster) or a Rouge-brush.

To remove finger prints and dirty spots we recommend the use of glass detergent.

To remove small scratches we recommend the use of automotive waxes and polishing compounds for cars. Please proceed carefully and strictly follow the cleaning instructions of the manufacturer.

- First apply glass detergent, waxes or polisher on the backside of the horns to test the result!
- Do not touch the membranes while cleaning the horns!
- Avoid scratching the horns with dirty fabrics and never use aggressive detergents or abrasives!

### CLEANING OF SATIN-FINISHED LACQUER SURFACES



We recommend to regularly clean satin finished color-coated surfaces (for ex. subwoofer body) with a dry soft fabric (duster) or a Rouge-brush.

To remove finger prints and dirty spots we recommend the use of glass detergent.

- Do not use waxes or polisher!

### CLEANING OF METAL SURFACES

Clean the powder coated and anodized surfaces of the frame parts with a regular duster or slightly moisted (i.e. by glass detergent) piece of cloth.

## WARRANTY

Avantgarde Acoustic Lautsprechersysteme GmbH warrants that the products are free from defects attributable to faulty manufacture. The warranty is limited to ten (10) years for material fatigue of the metal parts, wooden parts and plastic horn parts, five (5) years for the color coating and drivers, and two (2) years for all electronic components.

All products Avantgarde Acoustic have been thoroughly checked before shipping. In the case of problems, please check the following:

1. This warranty begins on the date of original purchase and may be enforced only by the original purchaser. Please keep the original dated sales slip as proof of warranty coverage. The warranty period is not effected by warranty services provided within the warranty period.

2. Except as specified below, this warranty covers all defects in material and workmanship in this product. Our liability for any defective product is limited to repair or replacement of the products, at our option. Any implied warranties, including warranties of merchantabilities and fitness for a particular purpose, or damages based upon inconvenience, loss of use of the product, or commercial loss, or any other damages are not covered by this warranty.

3. Any modification, alterations or changes to the product are strictly prohibited.

4. In case of defects, please contact at first your dealer. If at the sole discretion of Avantgarde Acoustic it is necessary to ship the product to the manufacturer, please make sure that:

- λ The product is carefully packed and shipped in its original shipping box.
- λ The Avantgarde Acoustic warranty card is filled in completely and send together with the product.
- λ The product is shipped free of charge to us, e.g. you must pay all shipping charges (ex. freight, insurance etc.).

5. The following are not covered by this warranty:

- λ Regular inspections, tuning, repairs or replacement of parts which are attributable to normal wear and tear.
- λ Damage occurring during shipment of the product. All transport claims must be presented to the carrier.
- λ Damages or scratches on the surface of the product (ex. housing, horns, metal parts, color coating etc.). These claims must be presented within 3 days after the date of original purchase with your dealer.
- λ Damage resulting from incorrect placement, faulty connections, improper operation. Damage resulting from failure to follow instructions supplied with the product.
- λ Damage resulting from accident, misuse, abuse, neglect, electrical surges, lightning or other acts of God.
- λ Damage resulting from repair or attempted repair by anyone other than Avantgarde Acoustic or an authorized Avantgarde Acoustic dealer.
- λ Consequential, secondary or subsequent damages to other third party appliances.

6. Some states do not allow limitations on how long an implied warranty lasts and/or do not allow the exclusion or limitation of incidental or consequential damages, so the above limitations may not apply to you.

7. Register your new speaker on our website and receive an extension of your factory warranties by 1 year.

[www.avantgarde-acoustic.de](http://www.avantgarde-acoustic.de)

Avantgarde Acoustic  
Lautsprechersysteme GmbH  
Nibelungenstr. 349  
D-64686 Lautertal - Reichenbach  
Germany



Avantgarde Acoustic GmbH  
Nibelungenstrasse 349  
D-64686 Lautertal  
Germany

Tel: +49.6254.306 100  
email: [info@avantgarde-acoustic.de](mailto:info@avantgarde-acoustic.de)  
[www.avantgarde-acoustic.de](http://www.avantgarde-acoustic.de)